



• • •

fasten with 8 3" common nails

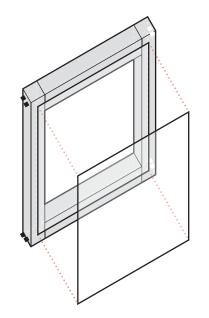


• • • •

inlay and glue 22.5" sq. transparent overlay

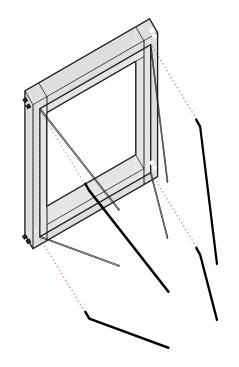




drill 1/8" holes in corners; insert 1/8" rod (14.5" length, 30 deg. bend 1" in)

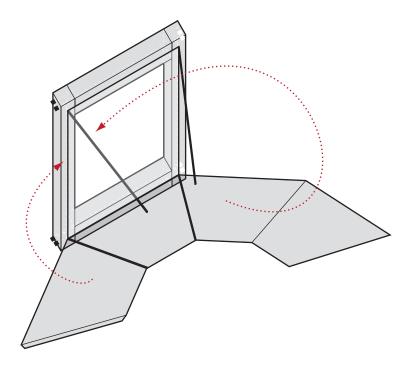

$\bullet \bullet \bullet \bullet \bullet \bullet$

wrap fabric around rods and glue flap (cut pattern provided)

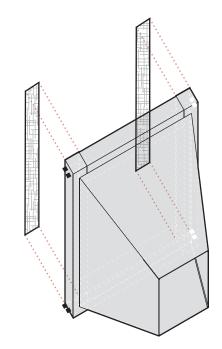

$\bullet \bullet \bullet \bullet \bullet \bullet \bullet$

back vertical 2x2s with 2" wide industrial strength velcro

